



Instructions

Auto Lock Cap Removal Pliers

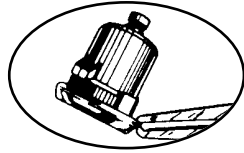

No. ALCP-10

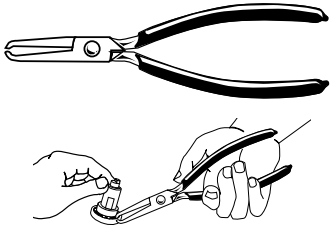

- Quickly removes both factory and replacement auto lock face caps.
- Simply grip edge of cap and peel downward.
- Foreign Lock: By gently unrolling crimp, most caps can be used again.

082401 • 35T00-057-00



© 2001 • HPC, Inc., Schiller Park, IL • 60176 • www.hpcworld.com

Instructions

Auto Lock Cap Removal Pliers



No. ALCP-10

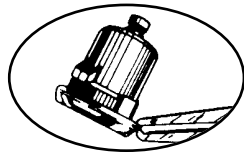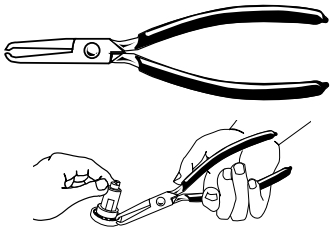

- Quickly removes both factory and replacement auto lock face caps.
- Simply grip edge of cap and peel downward.
- Foreign Lock: By gently unrolling crimp, most caps can be used again.

082401 • 35T00-057-00



© 2001 • HPC, Inc., Schiller Park, IL • 60176 • www.hpcworld.com

Instructions

Auto Lock Cap Removal Pliers



No. ALCP-10

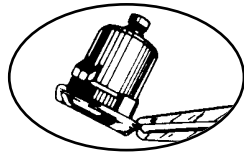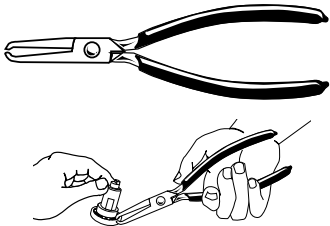

- Quickly removes both factory and replacement auto lock face caps.
- Simply grip edge of cap and peel downward.
- Foreign Lock: By gently unrolling crimp, most caps can be used again.

082401 • 35T00-057-00



© 2001 • HPC, Inc., Schiller Park, IL • 60176 • www.hpcworld.com

Instructions

Auto Lock Cap Removal Pliers



No. ALCP-10

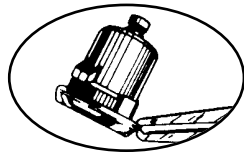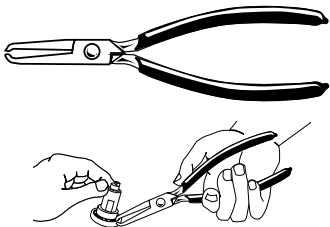

- Quickly removes both factory and replacement auto lock face caps.
- Simply grip edge of cap and peel downward.
- Foreign Lock: By gently unrolling crimp, most caps can be used again.

082401 • 35T00-057-00

© 2001 • HPC, Inc., Schiller Park, IL • 60176 • www.hpcworld.com