


Instructions




Mortise Cylinder Lock Tap

No. CLT-4

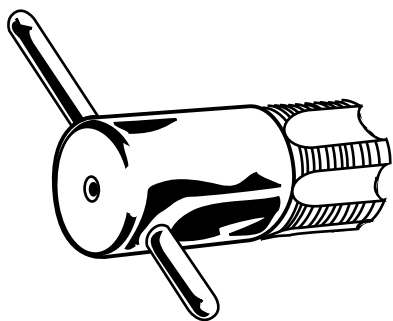

DIRECTIONS:

1. Place lock case in a vise (if not in the door). Put several drops of oil on the cylinder threads. Enter tap straight into the cylinder hole and turn one half-turn counterclockwise (this will assure you of proper cutting alignment). While carefully holding tap straight, turn clockwise slowly and tap will re-thread stripped or worn cylinder hole.

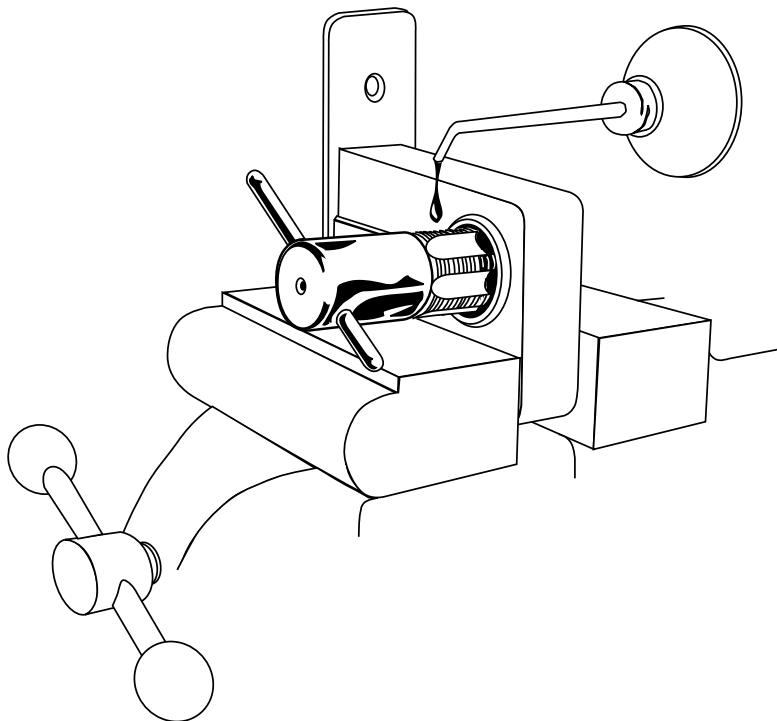

040500

35T00-063-00